

FIG. 1



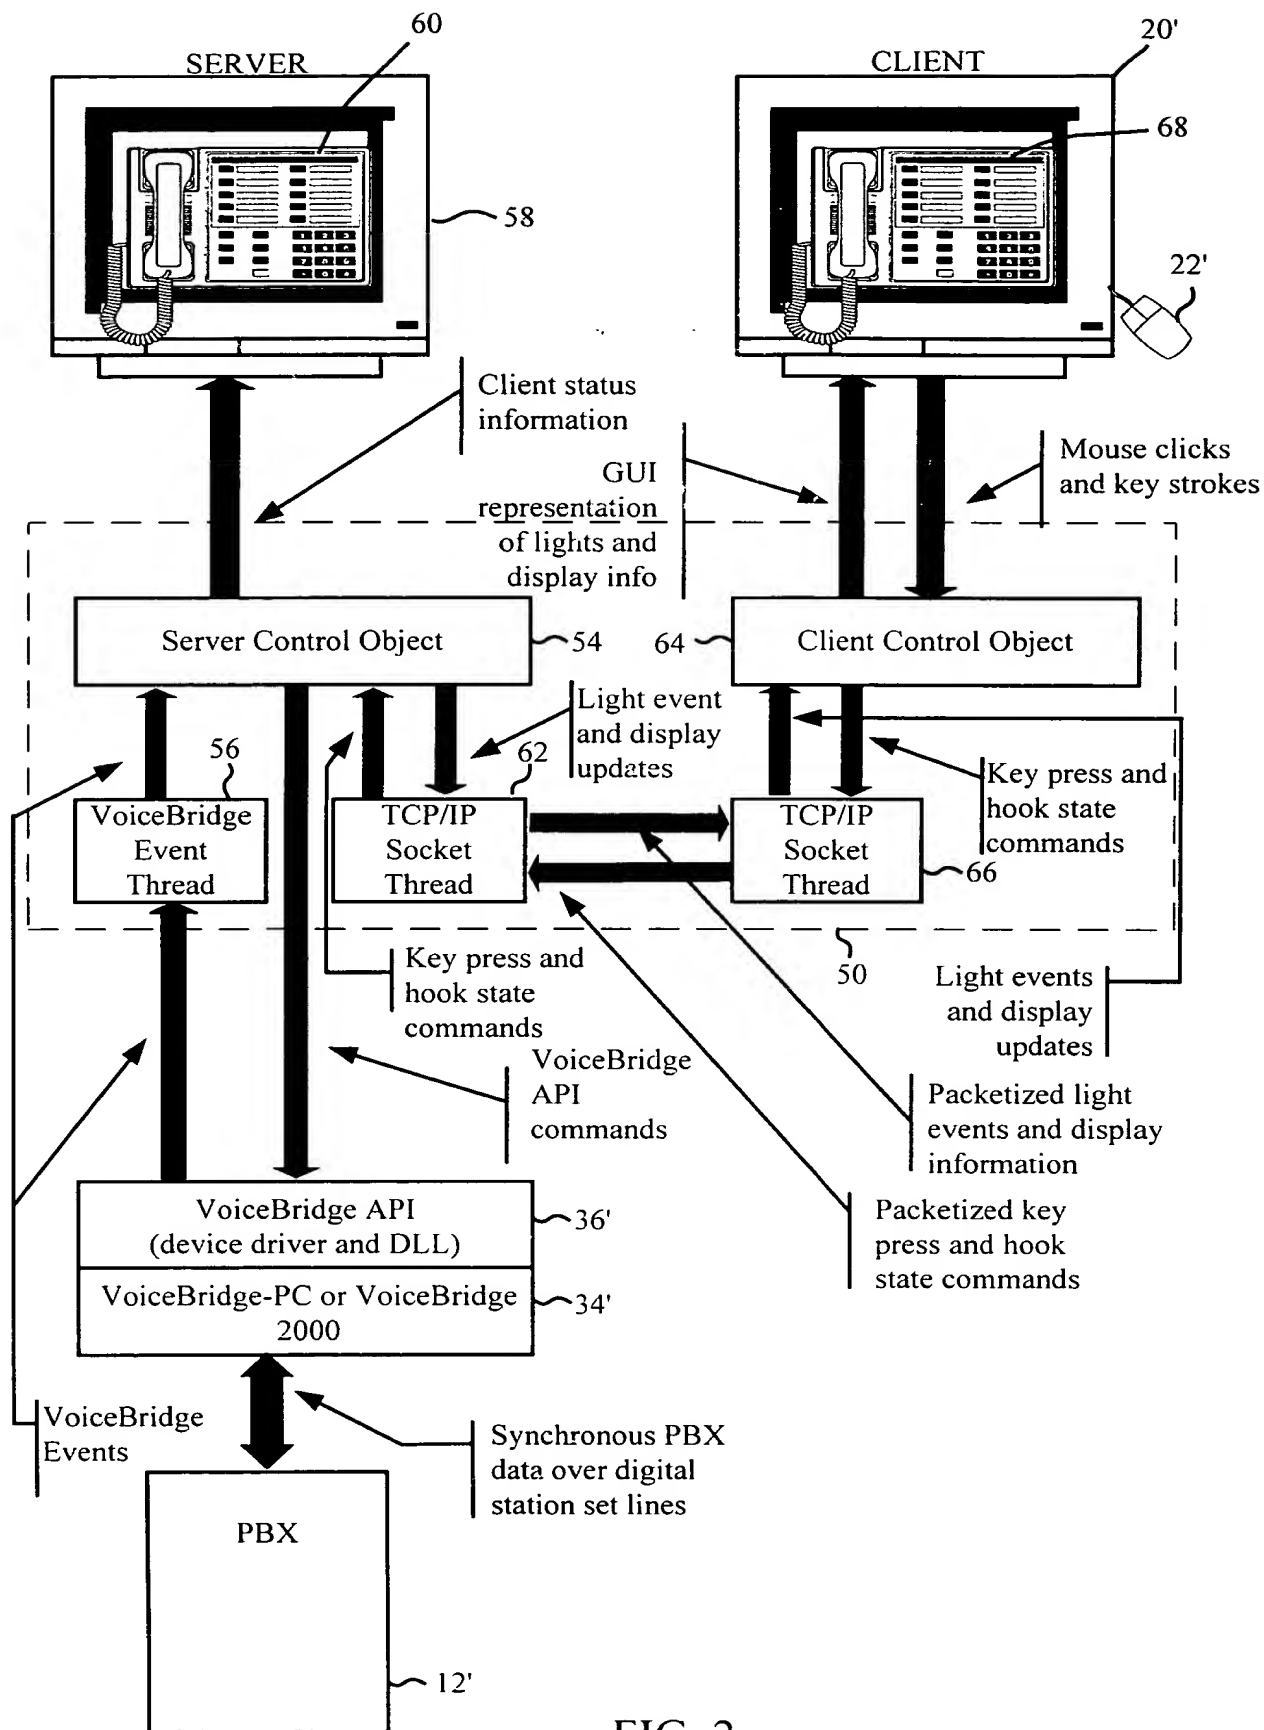


FIG. 2

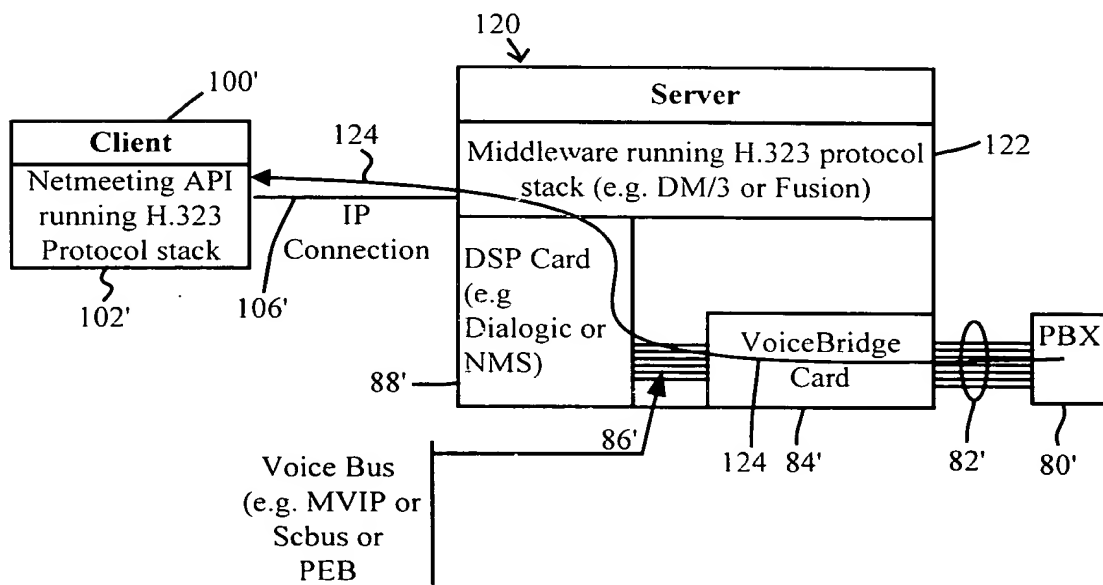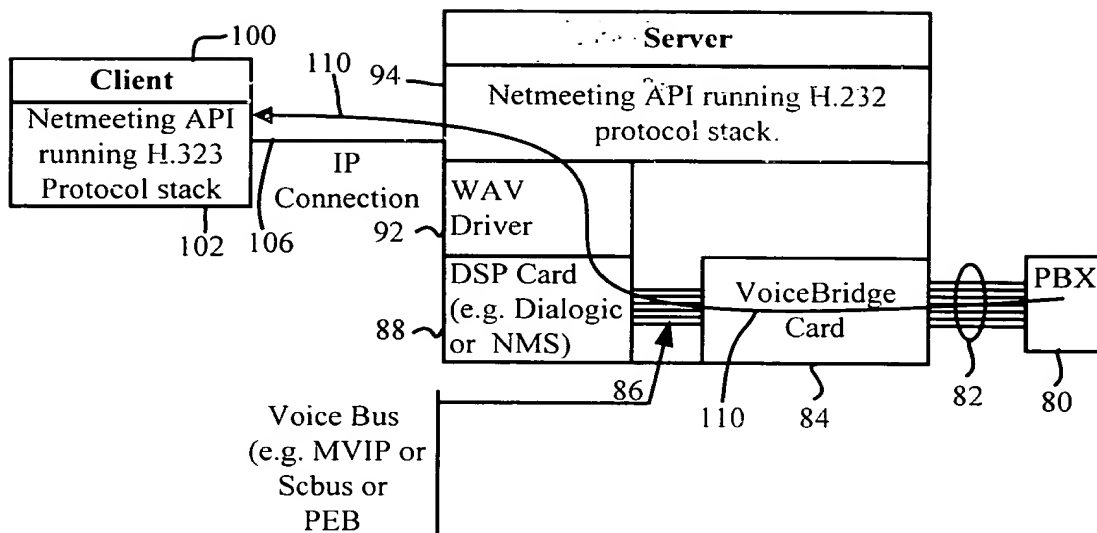

Server

Client

StartRemote(). Wait for client to connect.

StartRemote(). Initiate a connection.

Accept connection and transmit go-ahead.

Transmit channel number.

Start active mode (i.e. open VoiceBridge channel).

Transmit PBX type.

Set phone type to match PBX type.

Send initial channel state data (lights and display information).

 


FIG. 5

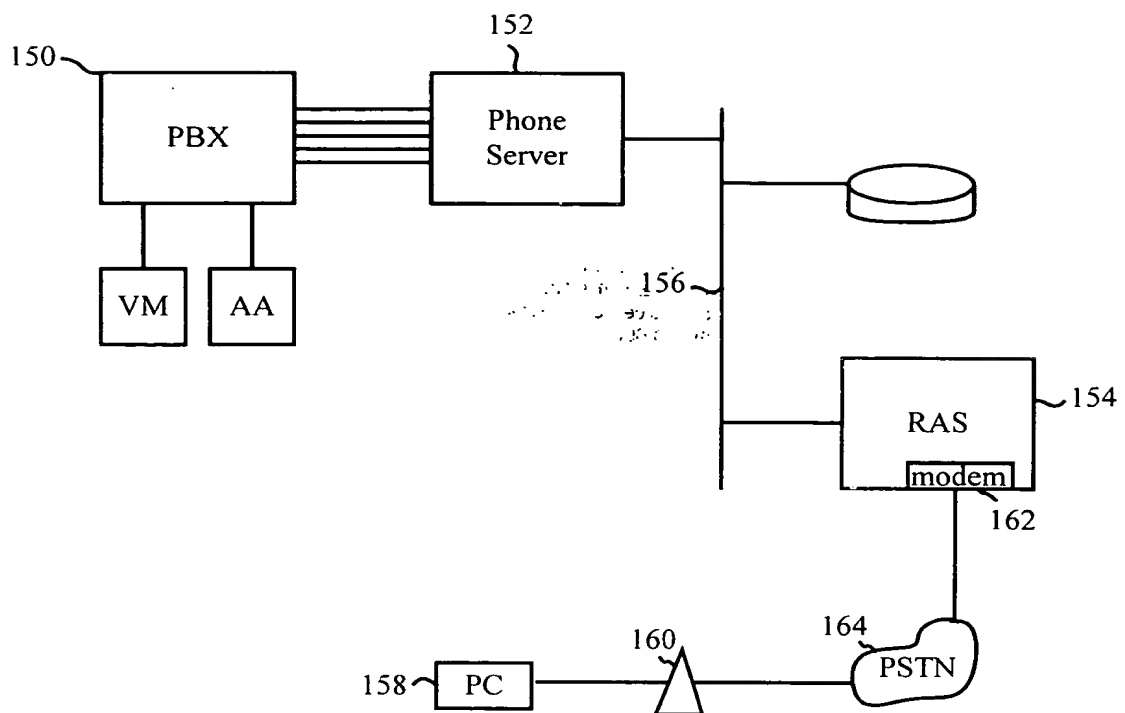


FIG. 6

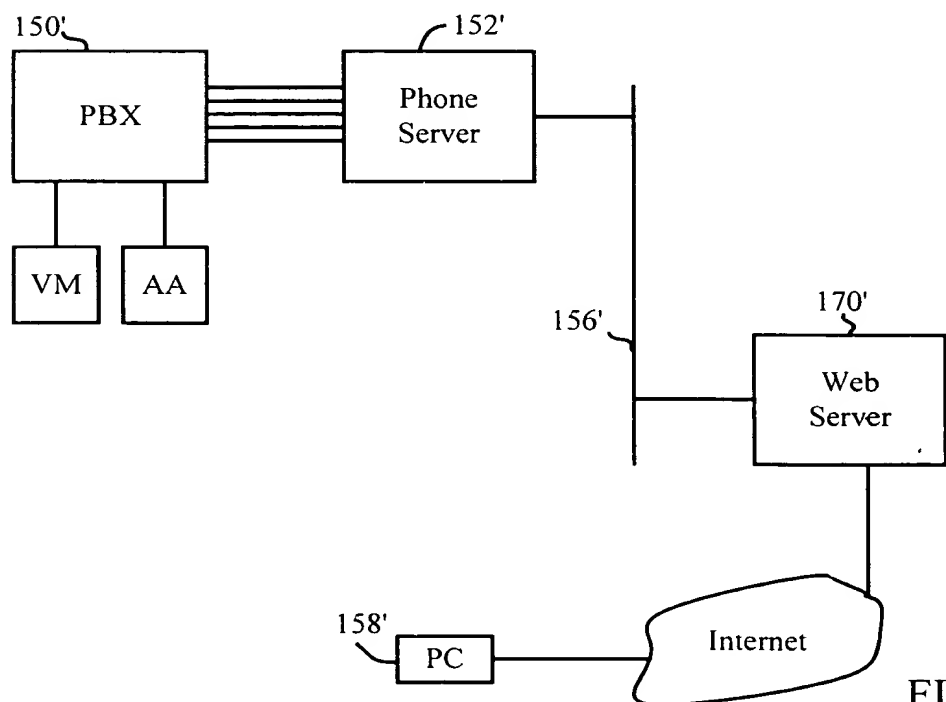


FIG. 7

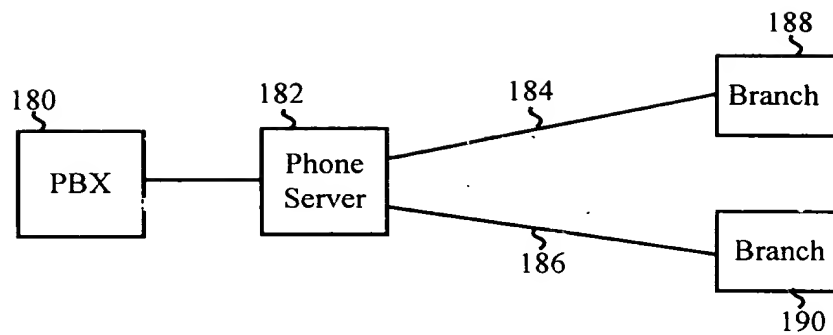


Fig. 8

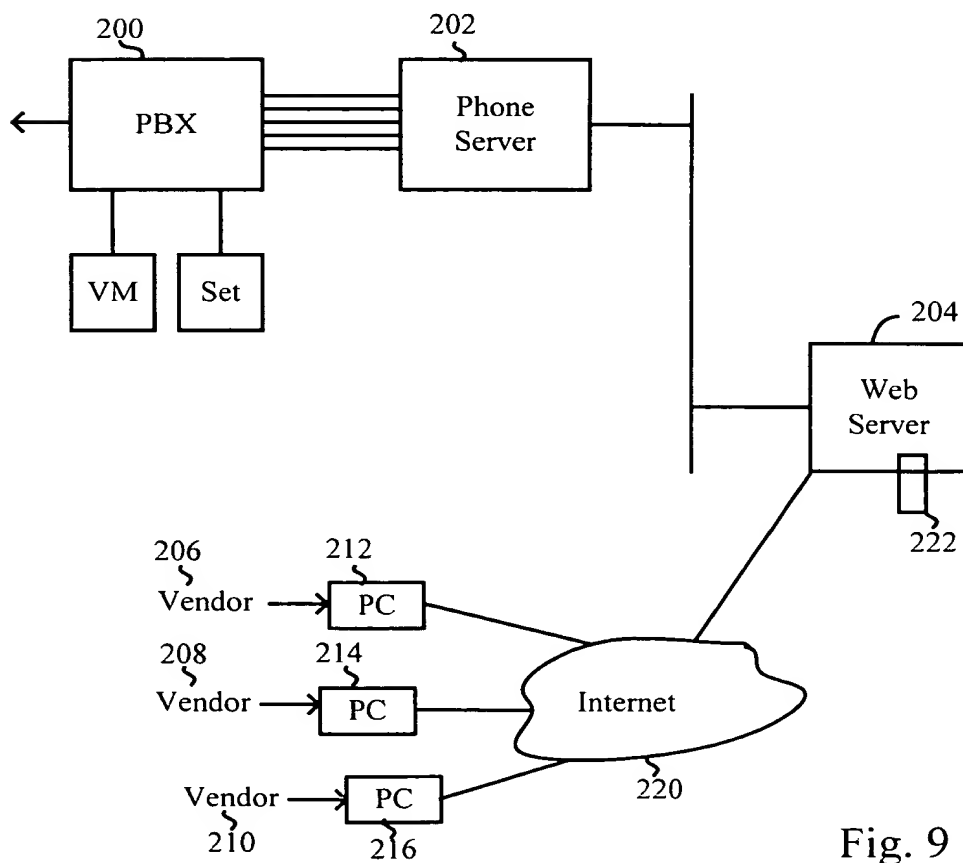


Fig. 9